USAGE AND SAFETY INSTRUCTIONS FOR LIFT BEAMS







WARNING

To ensure proper lifting and to avoid injuries:

- · Never Apply more force than the SWL.
- Ensure that Tare + Load is never more than the capacity of the crane.
- · Only qualified operators should use this lifter.
- · Lifter must be visually and mechanically inspected before use.
- · Any modifications / repairs should be made by qualified pesonnel.











Identified	Preventive Measures
	Suspend the suspension beams from the lashing points indicated for this purpose
	Do not use the beams in case deteriorated or defective material is detected.
	The auxiliary elements of elevation will have locking devices to avoid unvoluntary unlashing of the cargo
	Use suspension elements according to the following rules and regulations:
	EN 818-4
	EN 818-5 EN 13414-1
Cargo Falls	EN 13414-1 EN 1492-1
	EN 1492-2
	Cargo well secured
	Shackles and slings well secured
	Suspend the cargo from above its gravity center
	Avoid abrupt stops and jerks while using the beam
	Do not draw the cargo obliquiely

Stability Maintain the horizontal of the suspension beam. Maximum inclination 6° Suspend the cargo from above its gravity center. Store the suspension beam in a horizontal position.

Maintain the suspension beam perfectly fastened,

Identified Risks	Preventive measures
Crushing/injuries	-Maintain the visibility while operating with the equipment -If not possible, use sign alling operators -Do not stay below suspended cargo -Mark with buoys the working area -Do not enter the working area unless you are an operator -Pay attention to the suspension beam when elevated, both when it goes with cargo and when notDo not store and position the suspension beam in a vertical positionMind injurinies of hands and feet while mounting or demounting the beam.
Incorrect positions	-Suspend and manipulate the beam by the rings. Do not take by hand -Mind the ergonomics principles -Make sure the beam is suspended with the cargo already secured - Do not exceed the allowed SWL.
Collisions	-Take care the equipment does not collide against persons or objects. -Avoid abrupt stops and jerks while operating it. -Watch carefully the suspension beam when elevated, both when loaded and when not.
Falls at the same level	-Maintain the working area clean and clear - Always pay attention to the position of the suspension beam
Falls from different levels	-Do not use the beam to transport people -To manipulate cargo above 2m high, use harness or take prevention measures.

SECURITY EQUIPMENT

The operators must wear the obligatory security equipment throughout the whole opertation (use harness when necessary)






CHECK - UP BEFORE OPERATIONS


Before operation, the state of the elevation elements (shackles, slings, wires, hooks, hammerlocks) must be checked always. If they are not in perfect conditions, they must be replaced by new ones.

The elelvation elements must comply with the following rules and regulations:

- EN 818-4
- EN 818-5
- EN 13414-1
- EN 1492-1
- EN 1492-2




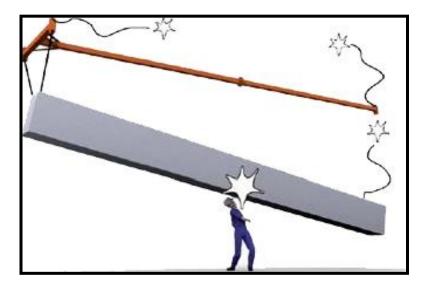

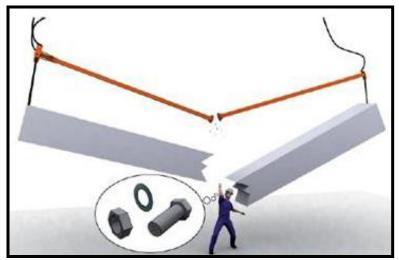


CARGO STABILITY

Avoid lack of stability of the cargo. For this, do not EVER suspend it from below its gravity center.

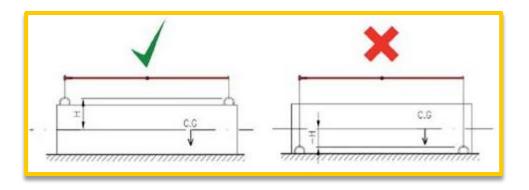


The cargo, UNLESS THE CONTRARY IS INDICATED, must be balanced. The beam cannot exceed 6° inclination with respect to the horizontal.

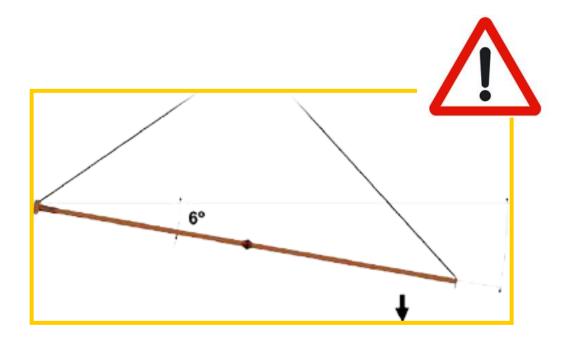


OPERATIONAL PROCEEDINGS

The elevation of people with the beams is **strictly** forbidden.

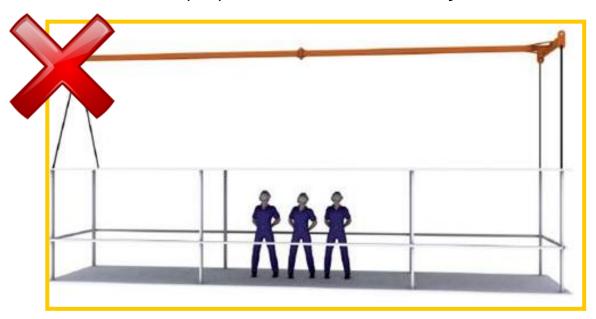

The personnel who manipulates the **beam must be always ATTENTIVE to the situation of the beam**, both when loaded and when not.

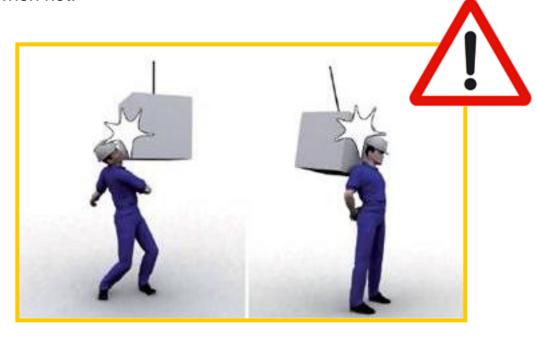



Please send your inquiries about LIFTING EQUIPMENT to:

info@liftbeams.com

TEC CONTAINER S.A. C/Tajo 19, P.I. "Las Acacias" 28840 – Mejorada del Campo Madrid - SPAIN





